

TCSD MANUAL SET, VOL. 1
Turbine Control System – Digital

Installation Manual
User's Manual

SD-4000-02

General Index

INS: Installation Manual USR: User's Manual REF: Reference Manual SER: Service Manual

A

Accel/Decel schedules, REF: 3-1
 Accessory options, INS: B-2
 Acknowledge (ACK) queue, USR: 6-9, 6-8,
 6-10 – 6-12, REF: 3-1, 3-9 – 3-10, A-3,
 A-10
 Acknowledge (ACKNL DGE) command,
 USR: 6-9, 6-8, 6-10 – 6-12, REF: 3-9 –
 3-10
 Adjustment Procedures
 N1 and N2 Overspeed Threshold,
 USR: 2-4
 Power Fail Threshold, USR: 2-4
 Start/Run Crossover Threshold, USR: 2-6
 Start/Run Overtemperature Threshold,
 USR: 2-6
 Alarm Outputs
 PMALARM output, USR: 4-7, 6-10,
 SER: 3-2
 PMSHUTDN output, USR: 4-7, 6-10,
 SER: 3-2
 WARNING output, INS: 4-27, USR: 4-7
 Alarm Reset Inputs
 ACKNL DGE input, see also
 Acknowledge command, USR: 4-4,
 4-7
 FLTRST input, see also *Fault Reset*
 command, USR: 2-1, 4-4, 4-7, 5-3,
 6-12, REF: 3-9
 Analog input configuration jumpers, INS: 4-12
 Analog input gain and offset, using, USR: 7-3
 Analog input hardware channels, INS: 4-10,
 4-15 – 4-16
 Analog input scaling, USR: 7-3, SER: 3-17
 Analog meter signals, REF: 2-18
 Analog output configuration jumpers, INS: 4-18
 Analog output hardware channels, INS: 4-17,
 4-21
 ASCII error codes, USR: 6-1, REF: 3-7, 5-2
 Assignable analog input parameters, INS: 4-15

Assignable analog output parameters, INS: 4-21
 Assignable discrete input parameters, INS: 4-23
 Automatic Test Enable/Disable, USR: 6-13
 Auxiliary serial port, INS: 5-8, USR: 7-1,
 REF: A-2

B

Backplane wiring
 96-pin backplane connector, SER: 4-6
 Accessing the backplane, SER: 4-1
 Fuel metering valve power wiring,
 SER: 4-1, 4-4
 General power wiring, SER: 4-1, 4-3
 Thermocouple wiring, SER: 4-1, 4-5
 Backup outputs, USR: 4-4 – 4-5, 4-7, REF: 3-9
 Battery (replacing), SER: 2-9
 Battery replacement, USR: 3-1

C

Calibration, USR: 2-4, 2-6 – 2-9, REF: 2-4, A-4 –
 A-5, SER: 3-11, 3-13, 3-16 – 3-17, 3-28 –
 3-29
 Card cage assembly slot assignments,
 SER: 2-1
 Channel assignment, INS: 4-25, 4-28, 5-2 – 5-4,
 USR: 1-2, 4-1, 4-5 – 4-6, 7-3, REF: 1-2,
 3-8, SER: 1-2, 3-11 – 3-14, 3-18, 3-25
 Channel, enabling or disabling a, USR: 7-1
 CIT sensors, INS: 4-11, 4-16, B-1, REF: 2-1,
 SER: 3-19 – 3-20, 3-30 – 3-31
 Cold start, USR: 3-1 – 3-2, 7-1, 7-3
 Command Line Interpreter (CLI), USR: 6-1,
 REF: 1-1, 2-22 – 3-1, 3-7, 5-1 – 5-3
 Communication error codes, REF: 5-2
 Configuration errors, INS: 5-7, USR: 6-3,
 SER: 3-10, A-3
 Configuration File
 how to use, INS: 5-1, 6-1, USR: 7-1
 downloading, INS: 5-2
 proper control of, INS: 5-2

This publication could contain technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of this publication.

TCSD MANUAL SET

Configuration parameters (same as *configuration variables*), INS: 5-6, C-1, USR: 3-1, REF: 1-2, 2-13 – 2-14, 2-20, 3-1, 5-1, SER: 3-4, 3-10, 3-28

Configuring the auxiliary serial port, INS: 4-27, 5-8, USR: 7-1

Connector requirements, Rack mount, INS: 2-3

Connectors, rack chassis

- Analog I/O #1, INS: 4-6
- Analog I/O #2, INS: 4-8
- Discrete I/O #1, INS: 4-7
- Discrete I/O #2, INS: 4-9
- Fuel metering valve power output, INS: 4-4
- Power input, INS: 4-4
- RS-232C Serial I/O, INS: 4-5
- Thermocouple input, INS: 4-5

Control configurations, REF: 2-1, 4-1

Control functions description, REF: 1-1, 3-1

Control inputs, USR: 4-1, 5-1 – 5-2

Control Inputs, General

- MANCRNK, INS: 4-23 – 4-24, USR: 4-2, 5-1, 5-3, 6-6, A-2, REF: 3-6, A-6, A-10, SER: 3-22, A-6
- SHUTDN input, USR: 4-2, 5-3, SER: 3-22, 3-26
- START input, USR: 4-1, 5-2 – 5-3
- STARTPER input, USR: 4-1, SER: 3-22
- STOP input, USR: 4-2, 5-3, SER: 3-22, 3-26

Control Inputs, Other

- AIUSR0 through AIUSR7, INS: 4-15, USR: 4-5
- DIUSR0 through DIUSR3, INS: 4-24, USR: 4-5, SER: 3-32

Control outputs, USR: 4-5

Controls, see *Front Panel Controls*

CPU VME module, REF: 2-4, 2-7, SER: 2-2

D

Dedicated analog inputs, INS: 4-10

Dedicated analog outputs, INS: 4-17, 4-22

Dedicated discrete outputs, INS: 4-25

Diagnostics, INS: 5-6, REF: 4-4

Disabling individual tests, USR: 6-13

Discrete input hardware channels, INS: 4-22 – 4-23, REF: 2-18, 4-2

Discrete inputs

- Alarm acknowledge and reset, REF: 2-20
- Fuel control, REF: 2-1, 2-14, 2-20, 3-5, 4-4
- General operation, REF: 2-19
- Load/Droop/Other control, REF: 2-20

- Speed control, REF: 2-11, 2-14, 2-16, 2-19, 3-3 – 3-4

Discrete output hardware channels, INS: 4-24 – 4-26, REF: 2-21, 4-3

Discrete outputs, INS: 4-24 – 4-25, 5-3, 6-5, B-3, USR: 4-6, 6-9, A-2 – A-3, REF: 2-5, 2-9, 2-11, 2-13, 2-21, 3-10, 4-3, A-1, SER: 3-8, 3-10

Discrete variable, USR: 1-2, 6-8 – 6-9, 6-11 – 6-12, REF: 1-2, 3-10

Dual fuel control, REF: 2-11, 3-1, 3-5

E

Electrical interface description, REF: 2-1, 2-16

Enabling or disabling a channel, USR: 7-1

Enclosure, INS: 2-1, USR 2-1, REF: 2-4

Engine sensors

- Compressor Inlet Temperature (CIT) sensor, REF: 2-16
- Magnetic speed pickups, INS: 4-16, REF: 2-17
- Type K thermocouples, REF: 2-16

Environmental requirements, INS: 2-1

EPROM, REF: 2-7, 2-13, SER: 2-4 – 2-5

Error (ERR) queue, INS: 4-27, 5-7, B-3, USR: 4-4, 6-9, 6-8, 6-10, REF: 3-1, 3-9 – 3-10, A-3, SER: 3-2, 3-22, 3-25, 3-27

Error code, INS: 4-26 – 4-27, 5-5 – 5-8, B-3, USR: 3-3, 4-4, 4-6 – 6-1, 6-8 – 6-13, 7-2 – 7-3, REF: 2-20, 3-1, 3-6 – 3-10, 5-2 – 5-3, A-3, SER: 1-1, 3-2 – 3-32

Error code assignment, INS: 5-6 – 5-7, REF: 3-7 – 3-8, SER: 3-3, 3-11 – 3-20

Error code display, SER: 3-2

Error code listing, SER: A-1

Error codes (CLI), see *Communication error codes*

Error codes, summary descriptions of, SER: 3-1

Error handling, INS: 5-7, USR: 4-4, 4-7, 6-1, 6-8, REF: 2-13, 3-8 – 3-9, SER: 3-2

F

Fault Reset (FLTRST) command, USR: 5-1, 6-12 – 6-13, 7-2, REF: 3-6

Firmware, REF: 2-7, 2-13 – 2-14, 2-22, 5-1

FLTRST input, INS: 4-7, 4-22, 4-24, B-2, USR: 4-4, 6-9, 6-11 – 6-12, 7-2, A-2, REF: 3-9 – 3-10, A-3

Frequency inputs

- N1SAMP1, INS: 4-10, 4-16, 5-7, USR: 6-4 – 6-5, 7-2 – 7-3, A-2, REF: A-6 – A-8, SER: 3-14, 3-19, 3-32, A-4 – A-5

N1SAMP2, INS: 4-10, 4-16, USR: 6-4 – 6-5, A-2, REF: A-6 – A-7, SER: 3-14, 3-19, 3-32, A-4 – A-5
 N2SAMP1, INS: 4-10, 4-16, USR: 6-4 – 6-5, A-3, REF: A-9, SER: 3-14, 3-19, 3-32, A-4 – A-5
 N2SAMP2, INS: 4-10, 4-16, USR: 6-4 – 6-5, A-3, REF: A-8 – A-9, SER: 3-14, 3-19, 3-32, A-4 – A-5

Front Panel Controls

N1 overspeed threshold pot, USR: 2-3 – 2-4
 N2 overspeed threshold pot, USR: 2-3, 2-5
 Power Fail threshold pot, USR: 2-1, 2-3 – 2-5
 Running mode overtemperature threshold pot, USR: 2-3, 2-9
 Starting mode overtemperature threshold pot, USR: 2-3, 2-6, 2-9

Fuel Control Inputs

FUEL1EN input, USR: 4-3
 FUEL1INC input, USR: 4-3
 FUEL1SEL input, USR: 4-3
 FUEL2EN input, USR: 4-3
 FUEL2INC input, USR: 4-3
 FUEL2SEL input, USR: 4-3
 FUELXFEREN input, USR: 4-3

Fuel metering valve interface, INS: B-1, REF: 2-21, SER: 4-1, 4-7

G

Gain setpoint, USR: 7-3
 GENEMIO1, USR: A-1 – A-2
 GENEMIO2, USR: A-1, A-3
 GENESPLT, USR: A-1, A-4
 GENETURB, USR: A-1, A-5, SER: 3-2, 3-4 – 3-20, 3-22, 3-25, 3-27
 Geometry control, REF: 2-14, 3-1, 3-6, A-10
 Geometry/Bleed valve interface, REF: 2-22
 GEOMxPOS, see *LVDT position feedback inputs*

H

Hardware description, REF: 2-1, 2-4
 Hazardous area classification, REF: 4-5

I

I/O channel assignments section
 I/O channel assignments examples, INS: 5-4 – 5-5
 I/O channel assignments format, INS: 5-3
 Installation requirements, INS: 2-1

Interconnecting ribbon cables, REF: 2-4, SER: 2-1 – 2-2

J

Jumper configuration
 Analog input channel jumpers, INS: 4-12 – 4-14
 Analog output channel jumpers, INS: 4-18 – 4-20
 FMV interface jumpers, SER: 4-7
 MIO VME Module jumpers, SER: 2-6
 UIF Module jumpers, SER: 2-7
 Watchdog timeout select jumper, SER: 2-8

L

LEDs

N1/N2 Overspeed, USR: 2-1
 Power Bus status, USR: 2-1
 Power Normal status, USR: 2-1
 Turbine Overtemperature, USR: 2-1, 2-6, SER: 3-21, 3-27
 User Interface Module status, USR: 2-1
 VME module Run/Fail status, USR: 2-1

Load control, INS: B-2, USR: 4-3 – 4-4, REF: 2-14, 2-17 – 2-18, 2-20, 3-1, 3-3 – 3-4, 4-4, A-6 – A-7

Load Control Inputs

DROOPSEL input, USR: 4-4
 LOADSEL input, USR: 4-4

Load control interface

Droop setpoint analog, REF: 2-18
 Load analog, REF: 2-17 – 2-18, 2-20
 Load setpoint analog, REF: 2-18

LVDT position feedback inputs

GEOM1POS, INS: 4-10, 4-17, B-2, USR: 6-4 – 6-5, A-3, REF: A-5, SER: 3-12, 3-17, A-4 – A-5
 GEOM2POS, INS: 4-10, 4-17, B-2, USR: 6-4 – 6-5, A-3, REF: A-5, SER: 3-12, 3-17, A-4 – A-5

M

MANUAL CRANK mode, USR: 5-3
 Manual Test Enable/Disable, USR: 6-13
 Mechanical interface description, REF: 2-1, 2-14
 MHOSTIF software, USR: 1-2, 3-2, REF: 1-1, 2-13, 2-22, 5-1 – 5-2, A-3, SER: 1-1 – 1-2

Mode Status Outputs

READYTOSTART output, USR: 3-2, 4-5
 RUNNING output, USR: 4-5
 SHUTDOWN output, USR: 4-6
 STARTING output, USR: 4-5

TCS D MANUAL SET

SYSFAIL output, USR: 4-6
Module slot assignments, SER: 2-1
Mounting
 rack, INS: 3-1 – 3-2
Multi I/O VME module, REF: 2-4, 2-8 – 2-9,
 2-11, 2-13
Multiplier/Limiter, REF: 3-1, 3-5

N

N1 control, USR: 4-3, REF: 3-1, 3-3 – 3-4, A-6 –
 A-8
N1SAMPx, see *Frequency (Speed) inputs*
N2 control, USR: 4-3, REF: 3-1, 3-3 – 3-4, A-8 –
 A-9, A-11
N2SAMPx, see *Frequency (Speed) inputs*
Non-volatile RAM, USR: 3-1

O

Offset setpoint, USR: 7-3
Oil pressure, USR: 4-5, 6-7, REF: 2-20, A-10,
 SER: A-7
Operating Modes, USR: 4-5
Overspeed threshold, USR: 2-3 – 2-5

P

Parameter name, INS: 1-2, 4-26, 4-29 – 4-32,
 5-3, USR: 1-2, 7-2 – 7-3, REF: 1-2, 5-2,
 A-2 – A-15
PF ADJ, see *Front Panel Controls, Power Fail
 threshold pot*
PMALARM, see also *Alarm Outputs*,
 INS: 4-25 – 4-27, 5-7, B-3, USR: 4-4, 4-7,
 5-2, 6-9 – 6-12, A-2 – A-5, REF: 2-20,
 3-7, 3-9 – 3-10, A-10, A-15, SER: 3-2,
 3-28 – 3-30
PMSHUTDN, see also *Alarm Outputs*,
 INS: 4-25 – 4-27, B-3, USR: 4-6 – 5-3,
 6-6 – 6-7, 6-10 – 6-11, 7-2, A-2 – A-5,
 REF: 2-20, 3-6 – 3-7, 3-9, A-10, A-15,
 SER: 3-2, 3-22, 3-25, 3-27 – 3-30, A-6 –
 A-7
Power fail threshold, USR: 2-1, 2-4, REF: 2-4,
 SER: 2-8
Power input module, REF: 2-4, SER: 2-1, 2-8
Power requirements, INS: 2-1
Power-down, USR: 3-1, 3-3, 7-1, 7-3
Power-up, INS: 6-1, USR: 3-1 – 3-2
Primary serial port, INS: 4-27
Programming, REF: 2-22, 3-4, 3-7, SER: 2-9
Protective mode, INS: 4-26, 5-6 – 5-7, USR: 4-4,
 4-6, 5-1 – 5-3, 6-8 – 6-12, REF: 3-1, 3-6 –
 3-10, 5-2, SER: 3-2, 3-22, 3-25, 3-27
Protective mode discrete outputs, INS: 4-26

Protective mode variables, USR: 6-10
Proximity
 Host Computer, INS: 2-2
 Input/Output Devices, INS: 2-2
Purpose, REF: 2-1, REF 2-7

Q

QDEPTH, INS: 5-7, USR: 6-8 – 6-12, 7-2,
 REF: 3-9 – 3-10, A-2 – A-3, A-10

R

R/V/I analog inputs, INS: 4-11
RAM, USR: 3-1, 6-2, REF: 2-7, 3-1, 4-4,
 SER: 2-9, 3-4, A-2
Range test errors, USR: 6-4 – 6-5, SER: 3-11,
 3-16, A-4 – A-5
READY TO START mode, USR: 5-1 – 5-2
Removal and Replacement
 CPU VME Module, SER: 2-3
 EPROM, SER: 2-5
 MIO VME Module, SER: 2-5
 Power Input Module, SER: 2-8
 Ribbon cable, SER: 2-2
 UIF Module, SER: 2-7
 Lithium battery, SER: 2-1, 2-9
Reset command, USR: 5-3, 6-11, REF: 3-8
Running errors, USR: 6-7, SER: 3-26, A-7
RUNNING mode, USR: 5-2

S

SENSORHI, USR: 7-2, REF: A-2
SENSORLO, USR: 7-2, REF: A-2
Sequencing/Monitoring control, REF: 3-1
Serial communication, INS: 4-3, 4-27, REF: 2-22
Serial port attributes, INS: 5-8
Setpoint, INS: 4-11, 5-1, 5-6 – 6-2, B-2 – B-3,
 D-1, USR: 3-1 – 3-2, 4-2, 4-4, 5-2 – 5-3,
 6-9, 6-8, 7-1 – 7-3, A-2 – A-5, REF: 1-2,
 2-5, 2-13, 2-16 – 2-20, 2-22, 3-3 – 3-6,
 3-9 – 4-2, 5-3 – A-15, SER: 3-4 – 3-27,
 3-30
Setpoint command, USR: 6-8, 7-2
Setpoint File
 what it is, INS: 5-1, 5-7
 how to use, INS: 5-7 – 5-8
 downloading, INS: 5-8
 maintaining the, INS: 5-8
Setpoint potentiometers
 N1 speed setpoint, REF: 2-17, A-6 – A-8
 N2 speed setpoint, REF: 2-17, A-9
 Process demand setpoint, REF: 2-17
 Speed trim setpoint, REF: 2-17

Temperature setpoint, INS: 6-5,
REF: 2-13, 2-17, 3-6
Setpoints for I/O control, USR: 7-1
SHUTDOWN mode, USR: 5-3
Software description, REF: 2-1, 2-13
Spares recommendation, SER: 3-2
Speed Control Inputs
IDLE input, USR: 4-2
N1STPT input, USR: 4-3
N2STPT input, USR: 4-3
PRODEMAND input, USR: 4-3
SPDRST input, USR: 4-2
SPDTRIM input, USR: 4-2
Start/Run crossover threshold, USR: 2-6
Start/Run overtemperature threshold, USR: 2-6,
2-9
STARTING mode, USR: 5-2
Startup sequencing errors, USR: 6-6,
SER: 3-21, A-6
System interconnect block diagram, SER: 4-6,
B-1
System level errors, USR: 6-2, SER: 3-4, A-2
System specifications, REF: 1-1, 4-1

T

T1SAMPx, see *Temperature inputs*
TCSO C1, INS: 4-10, 4-17, 4-22, 4-24 – 4-25,
USR: 2-4
TCSO C2, INS: 4-10, 4-17, 4-22, 4-25,
USR: 2-3 – 2-5, SER: 2-1
Temperature control, REF: 2-14, 2-16, 3-4
Temperature inputs, INS: 4-16, 5-4
T1SAMP1, INS: 4-15 – 4-16, 6-3, B-1,
USR: 6-4 – 6-5, A-2, REF: A-11,
SER: 3-15, 3-19, 3-31, A-4 – A-5
T1SAMP2, INS: 4-15 – 4-16, B-1,
USR: 6-4 – 6-5, A-2, REF: A-11 –
A-12, SER: 3-15, 3-19, 3-31, A-4 –
A-5
TURBTEMP1, INS: 4-16, 4-21,
USR: 6-4 – 6-5, A-2, REF: A-15,
SER: 3-20, A-4 – A-5
TURBTEMP2, INS: 4-16, 4-21,
USR: 6-4 – 6-5, A-2, REF: A-15,
SER: 3-20, A-4 – A-5
Temperature sensors, INS: 4-16
Test connectors, USR: 2-3, SER: B-1
Thermocouple (temperature sensor), INS: 2-3,
4-3, 4-5, 4-16, REF: 2-14, 2-16, 3-4, 4-1,
A-10, A-13, SER: 3-15, 3-20 – 3-21,
3-31 – 3-32, 4-5
Three-digit error code, INS: 5-6, USR: 6-1,
REF: 3-7, SER: 3-2, A-1

TITSTPT input, USR: 4-4
Troubleshooting from error codes, SER: 1-1,
3-1
Turbine Control Outputs
FUEL1ON output, USR: 4-6
FUEL2ON output, USR: 4-6
FUELMDVON output, USR: 4-6
IGNITORON output, USR: 4-6
PURGEON output, USR: 3-2, 4-1, 4-6
STARTERON output, USR: 4-6
TURBTEMPx, see *Temperature inputs*
Turning OFF TCSO, see *Power-down*
Turning ON TCSO, see *Power-up*

U

User defined analog inputs, REF: 2-18
User defined discrete inputs, REF: 2-19 – 2-20,
4-2
User Interface (UIF) module, REF: 2-4, 2-9,
2-11

V

Verifying analog inputs, INS: 6-2
Verifying analog outputs, INS: 6-3
Verifying discrete inputs, INS: 6-5
Verifying discrete outputs, INS: 6-5
Vibration Status Inputs
VIBSAMP1, USR: 4-4, 6-4 – 6-5, A-3,
REF: A-15, SER: 3-11, 3-16, 3-29,
A-4 – A-5
VIBSAMP2, USR: 4-4, 6-4 – 6-5, A-3,
REF: A-15, SER: 3-11, 3-16, 3-29,
A-4 – A-5

W

Warm start, USR: 3-1, 7-1, 7-3
WARNING, see also *Alarm Outputs*,
INS: 4-25 – 4-27, 5-5, 6-5, B-3,
USR: 4-4 – 4-5, 4-7, 6-7 – 6-9, 6-11 –
6-12, A-2 – A-5, REF: 2-21, 3-8 – 3-10,
4-3, A-7, A-9, A-15, SER: 3-2, 3-28 –
3-30, A-7
Watchdog timeout, selecting, SER: 2-8
Wiring information, general, INS: 4-1

